




## 2007 – 2011 JK Wrangler Evap. Canister Relocation Bracket

### Evap. Skid Installation

**STEP 1:** Begin by removing the evap. canister from the factory mount.

**STEP 2:** Locate your relocation bracket and hold in place up behind the gas tank, against the inside of the passenger side upper coil mount with the bolt slots centered on the frame crossmember as shown in figure 1. Mark the two crossmember holes and the hole located on the end by the coil mount. Drill the two crossmember holes using a 5/16" drill bit. Using a 3/8" drill bit, drill the hole in the coil mount.

Figure 1

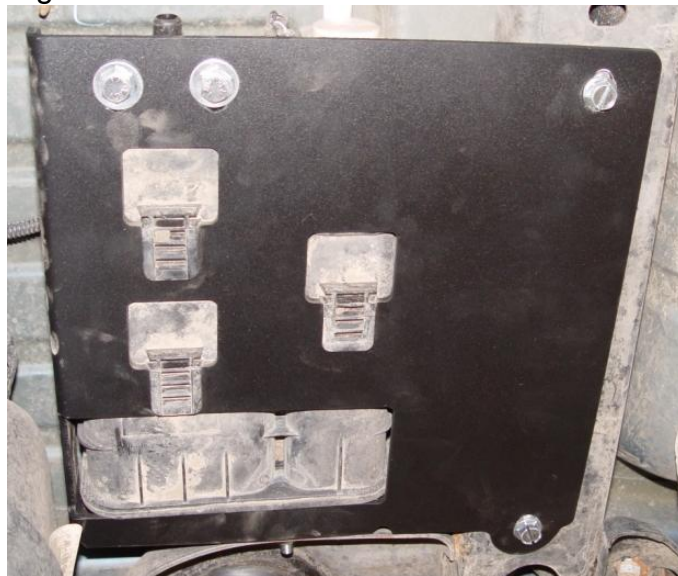

**STEP 3:** Insert the supplied 3/8" x 3/4" bolt and washer into our bracket then attach canister to your T&T relocation bracket as shown in Figure 2. Bolt the retaining bracket in place using the 2 – 3/8" x 1.25" bolts, nuts and washers supplied in your hardware kit (Figure 3).

Figure 2



Figure 3



**STEP 3 (07'-11' Models Only):** Undo the clip on the Evap. Canister Sensor (white plastic piece in Fig. 2), rotate 180 degrees and reinstall.

**STEP 4:** Install mount using the 2 – 3/8" thread cutting bolts at the crossmember and 3/8" nut and washer at the coil mount as shown in Figure 4.



**STEP 5:** Locate the supplied hose and reconnect canister lines to the proper locations.



### Components:

- Evap relocation bracket
- "L" bracket

### Hardware

- 2 - 3/8" X 1" thread cutting bolts
- 1 - 3/8" x 3/4" bolt
- 2 - 3/8" x 1.25" bolts
- 5 - 3/8" washers
- 3 - 3/8" top-lock nuts
- 24" - 5/8" heater hose